

Version	Revision Notes
3.18.17	<p>Add new Visionary watchdog to monitor and restart API if it hangs</p> <p>Add date to log for checking timing between startup processes</p> <p>Update Duet Launching, hold UltimoX chip in Hard Reset on DuetX-5 and perform Soft Reset on Duet-WP Models</p>
3.18.16	<p>Add delay launching Duet</p> <p>Add launching debug</p>
3.18.15	<p>Add D5000 Model to system</p> <p>Add current resolution to MV5 Info Page</p> <p>Update MassConfig CSV File to support UTF-16 in and out</p> <p>Update AUDIO.DAC_MUX parameter setting at bootup</p>
3.18.14	<p>Add javascript filesize check to Splash Image update</p> <p>Add AES67 QOS Controls</p> <p>Add BT.BUTTON_ENABLED to GUI of BT Units</p> <p>Add Diagnostics link to Main GUI</p> <p>Add Enable/Disable MassConfig buttons to Diagnostics page on Decoders</p> <p>Add Save Config Button to Diagnostics page of all units</p> <p>Add VideoWall Keys back to MassConfig, removed unused/invalid keys</p> <p>Add DHCP to continually attempt to get an address, even if it fails at initial boot</p> <p>Add Restart Stream button to Encoders Diagnostics page</p> <p>Add Netstat Query Button to Diagnostics page for all Units</p> <p>Add Latest Version to MV5 info section</p> <p>Update Network Stream Filters in internal switch</p> <p>Update switch AES67 functions and PTP config</p> <p>Update handling for QSC PTP Announce packet containing extra bytes</p> <p>Update GPIO control for E5200 and DuetE-5 (IR functionality)</p>

Update to allow TAG Controls for DuetE5-WP-BT

Update MV5 Default Scaler functionality

3.18.13 Add MV5 Scaler Version to SPI replies, and show on MV5 info Page

Add ve_checker.sh

Update MV5 Scaler

Update Auto-IP Failover when DHCP Fails

Update WP loss of analog audio when HDMI is unplugged

Update syntax of switch to avoid breakout error

Update power and link LED Polarity on MV5

3.13.56 Add GPIO to X5100

Add SRC MUTE for rework units that use SOC GPIO instead of Ultimo GPIO

Update btm_button debounce to match 4 series

Fix Analog Volume Control on D5100

3.13.54 Add API control over Power and Link LEDs

Add direct re-connect to same host after going into VIDEO.OUTPUT=STANDBY/LOGO/OFF

Add API control over Power and Link LEDs

Add new default Splash Screen image

Re-enable Dante options in GUI

Resolved audio issue with wallplates when no HDMI connected

Resolved wallplate audio routing issues

Fix display of decoder and encoder IP addresses on Splash Screen

Fix javascript error when attempting to save Config Page GUI on E5-WP

Fix E5-WP no analog audio

Fix non-defaulted parameter state in GUI

Fix for SRC ticking with MOD-DANTE-5



3.13.46 First public release